

GIGASET R700H PRO MANUAL



Table of Contents

[Table of Contents](#)

[Getting to know your telephone](#)

[Making calls](#)

[Call lists](#)

[Message lists](#)

[Local handset directory](#)

[Base directory](#)

[Assignment of the control key to a directory](#)

[Local answering machine](#)

[Network mailbox](#)

[Set fast access for the answer machine](#)

[Sound profiles](#)

[Calendar](#)

[Timer](#)

[Alarm clock](#)

[ECO DECT](#)

[Protection against unwanted calls](#)

[Resource Directory](#)

[Bluetooth](#)

[Additional functions using the PC interface](#)

[Customer Service & Help](#)

[Manufacturer's advice](#)

[Technical data](#)

[Accessories](#)

[Display icons](#)

[Other ManualsLib Projects](#)

Gigaset pro

R700H PRO

Up-to-date information on your product: → wiki.gigasetpro.com


Contents

Overview	3
Safety precautions	5
Getting started	7
Using the telephone	13
Getting to know your telephone	13
Making calls	17
Call lists	21
Message lists	22
Directories	24
Local handset directory	24
Base directory	28
Assignment of the control key to a directory	28
Answer machine	29
Local answering machine	29
Network mailbox	30
Set fast access for the answer machine	31
Additional functions	32
Sound profiles	32
Calendar	34
Timer	36
Alarm clock	36
ECO DECT	37
Protection against unwanted calls	38
Resource Directory	41
Bluetooth	42
Additional functions using the PC interface	44
Setting the handset	46
Appendix	57
Customer Service & Help	57
Manufacturer's advice	57
Technical data	59
Accessories	61
Display icons	62
Open Source Software	64
Index	65



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

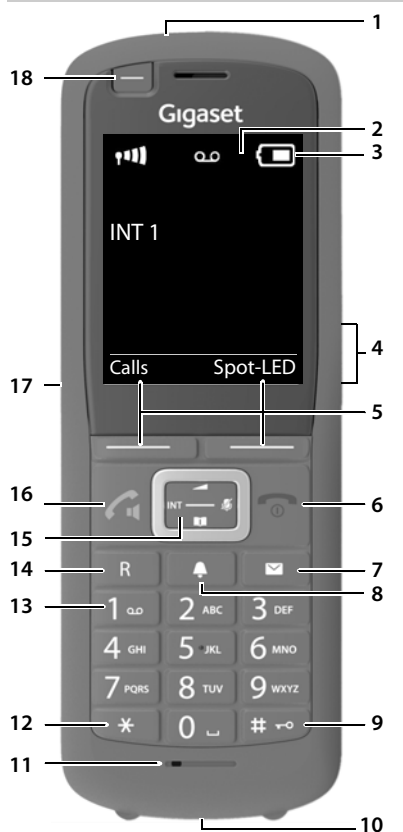

- 1 **Torch (spot LED) / Visual call signal**
- 2 **Display**
- 3 **Status bar** (→ p. 62)
Icons display current settings and operating status of the phone
- 4 **Volume keys** (→ p. 14)
for receiver/headset, ringtone, handsfree mode and appointment reminders
- 5 **Display keys** (→ p. 14)
Various functions, depending on the operating situation
- 6 **End call key / On/off key**
End call; cancel function

Go back one menu level
Return to idle status

- ▶ Press **briefly**
- ▶ Press and **hold**

Switch the handset on/off
(in idle status)

- ▶ Press and **hold**

7 **Message key** (→ p. 22)

Access to the calls and message lists;
Flashes: new message or new call

8 **Profile key**

Switch between sound profiles

9 **Hash key**

Lock/unlock the keypad
(in idle status)

- ▶ Press and **hold**

Toggle between upper/lower
case and digits
(when inputting text)

- ▶ Press **briefly**

10 **USB connection socket**

For data exchange between the handset and PC

11 **Microphone**

12 **Star key**

Open special characters table
(when inputting text)

- ▶ Press **briefly**

Switch between pulse
dialling/tone dialling

- ▶ Press **briefly**

(during existing connection)

13 **Key 1**

Select answer machine/network
and mailbox

- ▶ Press and **hold**

14 **Recall key**

Consultation call (flash)

- ▶ Press **briefly**

Insert a dialling pause

- ▶ Press and **hold**

15 **Control key / Menu key** (→ p. 13)

Open a menu; navigate in menus and entry
fields; access functions (depending on the
situation)

16 **Talk key / Handsfree key**

Accept call; dial number displayed; switch
between receiver and handsfree mode;
send SMS (when composing an SMS)

Open the redial list

- ▶ Press **briefly**

Start dialling





- ▶ Press and **hold**

17 **Headset connection**

 
 



 
 



 

 

(3.5 mm jack)

18 **Functions key** (→ p. 14)

Illustration in the user guide






	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.




 





Keys

 or 	Talk key	 or 	Handsfree key
	End call key	 to 	Number / letter keys
 / 	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		Profile key
OK, Back, Select, Change, Save, ...		Display keys	

Procedures

Example: Switching Auto answer on/off

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = activated)

Symbols	Meaning
▶ 	When in idle status press the centre of the control key. The main menu opens.
▶  	Navigate to the  icon using the control key  .
▶ OK	Select OK to confirm. The submenu Settings opens.
▶  Telephony	Select the Telephony entry using the control key  .
▶ OK	Select OK to confirm. The submenu Telephony opens.
▶ Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
▶ Change	Select Change to activate or deactivate. Function is activated  /deactivated  .

Safety precautions



Read the safety precautions and the user guide before use.

Comprehensive user guides for all telephones and telephone systems as well as for accessories can be found online at gigasetpro.com in the Support category. We thereby help to save paper while providing fast access to the complete up-to-date documentation at any time.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!



Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Keep small cells and batteries, which can be swallowed, out of the reach of children. Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing. In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").



If a USB adapter cable is included, only use a USB power supply (5Volt) with USB-A connection. The use of other voltage sources e.g. PC's with USB connection can cause damage.

If a plug-in power supply is included, please use this power supply.

Getting started

Contents of the package

- One **handset**
- One battery cover (rear cover for the handset)
- One battery
- One charging cradle incl. power adapter
- One belt clip
- One rubber cover for the headset socket
- One rubber cover for the USB connection
- One user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.

The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.


This device is only suitable for a maximum installation height of 2 m.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the power adapter into the power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Pull out the plug **4**.

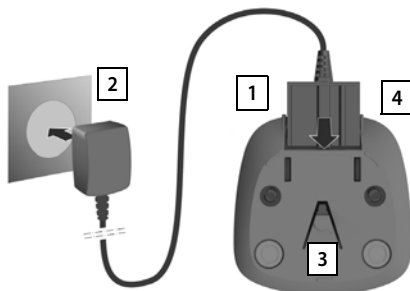


Setting up the handset for use

The display is protected by a plastic film. ▶ **Please remove the protective film!**

Inserting the batteries



Only use rechargeable batteries, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

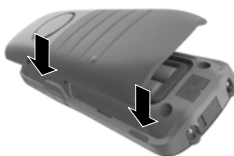

- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Line up the battery cover at the recesses with the inside of the casing **3**.
- ▶ Press the cover until it clicks into place.
- To re-open the battery cover:
 - ▶ Remove the belt clip (if attached).
 - ▶ Use your fingernail to reach into the recess and pull the battery cover up **1**.

 
Covering the headset socket


- ▶ Plug the lug of the rubber cover for the headset socket into the opening on the left of the handset.
- ▶ Press down the cap of the rubber cover.



Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle or using a standard USB mains adapter.



The batteries are fully charged when the power icon  disappears from the display.




The battery may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

As soon as power is applied to the handset, a Setup wizard starts.

Setting the display language

- ▶ Press the control key  until the language required is selected on the display, e.g. **English** ▶ press the display key **OK**


Deutsch

English

Francais

You can also change the display language later on in the **Settings** menu.

Select country (if available)

- ▶ Press the control key  until the country in which you are using the device is highlighted on the display, e.g. **Germany** ▶ Press the Display key **OK**

United Kingdom

Ireland

Austria

You can also change the country later on from menu **Settings**

Registering the handset (depending on the base)



Registration must be initiated on the base station **and** on the handset.
Both must be carried out **within 60 secs.**

On the base / On the router

Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).


Other base station/router:

- ▶ Information regarding the registration procedure
→ Documentation regarding your base/your router

On the handset

Message **Press the pairing button on the base station and wait** is displayed.

Registration on a router: The handset searches for a router in Registration mode. It is registered automatically.



- Registration on a base: ▶ Wait until the message disappears or ▶ press the End call key  ... **Please register handset** is displayed
- ▶ Press the Display key ... A search is performed for a base ready for registration ▶ If required, enter the system PIN (default for Gigaset bases: **0000**)

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**.

A handset can be registered to up to four base stations.


▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Registration** ▶ OK

Registering the handset: ▶ **Register Handset** ▶ OK ... an available base is sought ▶ ... if required: enter system PIN (default setting on Gigaset bases: 0000) ▶ OK

Change of base: ▶ **Select Base** ▶ OK ▶ ... use  to select base or **Best Base** ▶ **Select** ( = selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

De-registering the handset (depending on the base):

▶ **De-register Handset** ▶ OK ... the handset being used is selected ▶ ... use  to select another handset if required ▶ OK ... enter system PIN if required ▶ OK ▶ ... Confirm de-registration with **Yes**

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).



Some Gigaset bases and bases/routers from third party manufacturers might not be fully compatible with the handset and not all functions are displayed correctly. In such cases, use menu entry **Basic Registration**. This guarantees correct displays on the handset, but can entail restrictions for some functions.

Data protection

If the product is connected to the Internet via an IP base station or router, it will automatically connect to the Gigaset support server sending regular product specific information. This information will for example be used for firmware updates or to provide internet services.

For more information regarding the stored data, please visit → gigaset.com

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.



If the base permits it, you can set the date and time manually using the handset.

▶ Press the display key **Time**


or, if the date and time have already been set:

▶  ▶ ... use  to select  **Settings** ▶ OK ▶ **Date/Time** ▶ OK




The active cursor position flashes ▶ ... change cursor position with  ▶ ... switch between cursor positions with 

Enter date:

- ▶ ... using  enter the day, month and year in 8-digit format.


Enter time:

- ▶ ... using  enter hours and minutes in 4-digit format.


Save settings:

- ▶ Press the display key **Save**. ... **Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key 

The telephone is now ready for use.

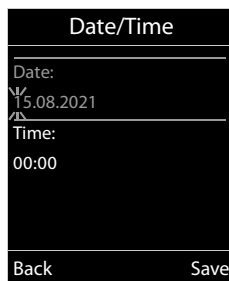

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.




Professional belt clip (accessory)

Attaching the belt clip:

Press the holder on the back of the handset so that the tabs click into place in the notches **1**.

- ▶ Secure the belt clip on the belt **2**.
- ▶ Hook in the handset with holder into the belt clip **3** and push it down **4**.

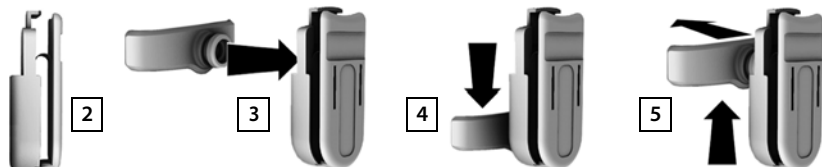

Removing the belt clip:

- ▶ Push the handset up and unhook it from the belt clip **5**.


Connecting the headset

- ▶ Remove the cover from the headset socket.
- ▶ Connect the headset with 3.5 mm jack to the left side of the handset **1**.

or

- ▶ Connect headset via Bluetooth (→ p. 43)

Setting the headset volume: → p. 48

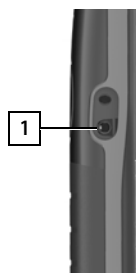

Connecting the USB data cable

For data exchange between the handset and PC:


- ▶ Connect the USB data cable with micro-USB plug into the USB socket at the bottom of the handset **1**.



i Connect the handset **directly** to the PC, **not** via a USB hub.

If you do **not** connect a USB cable, insert the rubber cover (provided) into the left of the opening to guarantee protection from splash water.

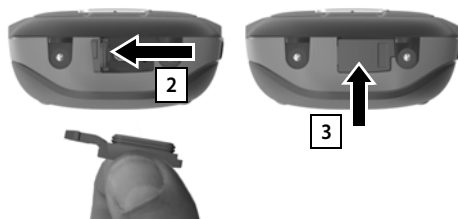

- ▶ Insert the lug of the rubber cover on the left of the opening **2**.
- ▶ Press down the cap of the rubber cover **3**.



Using the telephone

 
Getting to know your telephone


Switching the handset on/off


- Switch on: ▶ Press and **hold** the End call key  on the handset when switched off
- Switch off: ▶ When the telephone is in idle status, press and **hold** the End call key 

Locking/unlocking the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ▶  Press and **hold**

Keypad lock activated: the symbol  appears in the display.



-  If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

Define emergency numbers that can be dialled even when the keypad lock is enabled: → p. 52

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e.g.  for "press right on the control key" or  for "press the centre of the control key".

When the phone is idle

Open the main menu


Open the directory

Open the list of available online directories (such as the directory of a provider in the Internet or a central directory on a CAT-iq base)

Open the list of handsets

Set the voice volume for receiver / handsfree function

Set the microphone sensitivity

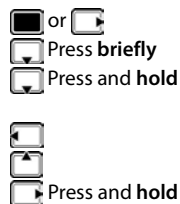

In submenus, selection and entry fields

Confirm a function

Navigate a line up/down

Select an option, move the cursor to the left/right



During a call

Open the directory

Open the list of available online directories (such as the directory of a provider in the Internet or a central directory on a CAT-iq base)

Mute the microphone

Set the microphone sensitivity

Initiating an internal consultation call

Change the voice volume for receiver / handsfree function



Press and hold




Press briefly





Press and hold



Depending on base: The assignment of directories to the key  (press **briefly** or **for longer**) can be changed.

Volume keys

Set volume for **receiver/headset, ringtone, handsfree mode** and indicating **appointments**: ▶

Press the volume keys  /  on the right side of the handset

Functions key

 


The Functions key can be assigned a function of your choice (**QuickDial / Send Key**).

▶ Press the key ... The function assigned is performed
Assign Functions key → p. 48

Display keys

The display keys perform a range of functions depending on the operating situation.



▶ Press the Display key ... The function assigned is performed

Display key icons → p. 62



The display keys have a function preset by default in idle status.

Changing the assignment: → p. 54

LED Torch

Use the phone as a torch. The spot LED is located on the top of the handset.

Activating the torch function

- ▶ Press the display key **LED torch**.

or

- ▶  ▶ ... use  to select  **Additional Features** ▶ OK ▶  **LED Torch** ▶ OK

Deactivating the torch function

- ▶ Press the display key **OFF**

or: after 2 minutes the function is automatically deactivated.

Menu guidance







The functions of your telephone are displayed in a menu that consists of several levels.





The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.

Select/confirm functions


Confirm selection using	OK or press the centre of the control key 
One menu level back using	Back
Change to idle display using	 Press and hold
Switch function on/off using	Change on  / off 
Activate/deactivate option using	Select activated  / not activated 

Main menu

In idle status: ▶ Press the **centre** of the control key  ▶ ... use the control key  to select a submenu ▶ OK


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Example

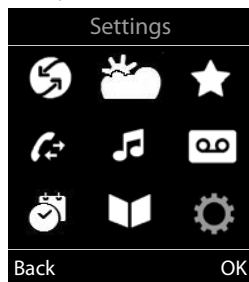

Submenus


The functions in the submenus are displayed as lists.

To access a function: ▶ ... use the control key  to select a function ▶ OK


Return to the previous menu level:

▶ Press the display key **Back**


or

▶ **Briefly** press the End call key 

Returning to idle status

▶ Press and **hold** the End call key 

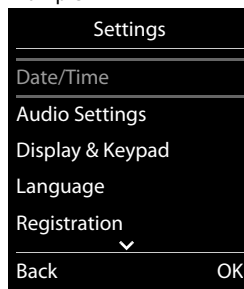

Example





If no key is pressed, the display will **automatically** change to idle status after around 2 minutes.

Entering text

 
 
 
Input position




- ▶ Use  to select an entry field. A field is activated when the cursor is blinking inside it. .
- ▶ Use  to move the position of the cursor.


Correcting incorrect entries

- Delete **characters** to the left of the cursor: ▶  Press **briefly**
- Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between  and  and the  key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.


 
- Selecting letters/digits: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash  key
When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶ ... use  to navigate to the desired character ▶ **Insert**

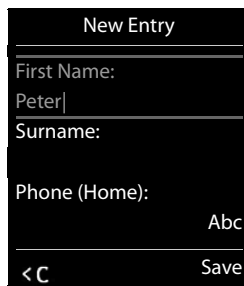

The availability of special characters depends on the language setting.


Making calls

Making a call

▶ ... use  to enter the number ▶ **briefly** press the Talk key 




or

▶ press and **hold** the Talk key  ▶ ... use  to enter the number



 
Cancel dialling: ▶ Press the End call key 

On an IP-capable Gigaset base


 
The connection is selected via the send connection (line) set for the handset. To use another line:

▶ press and **hold** the Talk key  ▶ ... use  to select the line ▶ **Dial** ▶ ... use  to enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

▶ ... use  to open the directory ▶ ... use  to select an entry ▶ press the Talk key 

If multiple numbers are entered:


▶ ... use  to select the number ▶ press the Talk key  ... the number is dialled



For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory

 

 
Depending on the base to which the handset is connected, you can dial from a public directory or a central directory on a CAT-iq base.

▶ press and **hold** 

Further information → in the detailed user guide for your telephone

Dialling from the redial list









The redial list contains the 20 numbers last dialled with the handset.

▶ **Briefly** press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ press the Talk key 

If a name is displayed:






▶ **View** ... the number is displayed ▶ ... use  to browse numbers if necessary ▶ ... when the required number is reached press the Talk key 

Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ **Options** ... possible options:
Copy an entry to the directory: ▶  **Copy to Directory** ▶ **OK**
Copy the number to the display:
▶  **Display number** ▶ **OK** ▶ ... use  to edit or add numbers if necessary ...
use  to save as a new entry in the directory
Delete the selected entry: ▶  **Delete entry** ▶ **OK**
Delete all entries: ▶  **Delete List** ▶ **OK**


Dialling from the call list

The call lists (→ p. 21) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶ ... use  to select  **Call Lists** ▶ **OK** ▶ ... use  to select a list ▶ **OK** ▶ ... use  to select an entry ▶ Press the Talk key 








The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.

 

The **Missed calls** list can also be opened by pressing the Message key .

Anonymous calling

When this function is enabled, your phone number is not sent.

- ▶  ▶ ... Use  to select  **Select Services** ▶ **OK** ▶  Select a connection ▶ **OK** ▶ **Withhold Number** ▶ **Edit**  = enabled)

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk / Handsfree key (/.

Accepting a call:

- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringtone: ▶ **Silence** ... the call can be accepted for as long as it is shown on the display







Returning a missed call

Return the last missed call, even if the number is not displayed.

- ▶  ▶ ... use  to select  **Select Services** ▶ **OK** ▶  **Automatic Recall** ▶ **OK**

Setting up Call Divert


When call divert is enabled, incoming calls are forwarded to another connection.

- ▶  ▶ ... Use  to select  **Select Services** ▶ **OK** ▶  Select a connection ▶ **OK** ▶ **Call Divert** ▶ **OK** ▶  Select when call divert is to apply (**All Calls/ When busy / No Answer**) ▶ **OK** ▶  Enter the phone number ▶ **Save Entry**

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine (where the system has a local answer machine):

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ ... Place the handset in the charging cradle ▶ ... hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset):


- ▶ Press  ▶ ... use  to set the volume ▶ **Save**




The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone



When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

or: ▶ **Briefly** press the Profile key 

Adjust the microphone sensitivity

Adjust the microphone sensitivity for the receiver or wired headset during a call.

- ▶  Press and **hold** ▶ Use  to set the required sensitivity ▶ **Save**






 



Changing without saving means the change only applies for the current call.

Permanent setting of the microphone sensitivity when the phone is idle:

- ▶  Press and **hold** ▶ Use  to select **Earpiece / Corded headset** ▶ Use  to set the sensitivity ▶ **Save**

or

- ▶  ... Use  to select  **Audio Settings** ▶ **OK** ▶  ▶ **OK** ▶  **Mic Sensitivity** ▶ **OK** ▶ Use  to select **Earpiece / Corded headset** ▶ Use  to set the sensitivity ▶ **Save**

Set the acoustic profile to loud surroundings:

- ▶ Press and **hold** the  button ▶ Use  to set the sensitivity ▶ **Save**

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → wiki.gigasetpro.com

List entry

The following information is displayed in the list entries:

- The list type (in the header)
- Icon for the type of entry:



Missed calls,



Accepted calls,



Outgoing calls (redial list),



Call on the answer machine (only for a system with a local answer machine)

- Caller's number. If the number is stored in the directory, the name and number type (**Phone (Home)**, **Phone (Office)**, **Phone (Mobile)**) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made (if the call is made via an IP connection)
- Date and time of call (if set)

Example

All calls	
Frank	
Today, 15:40	[3]
089563795	
13.05.21, 18:32	
Susan Black	
12.05.21, 13:12	
View	Options

Opening the call list

Via the display key: ▶ **Calls** ▶ select the list ▶ **OK**

Via the menu: ▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ select the list ▶ **OK**

Via the Message key (missed calls):

▶ Press the Message key ▶ **Missed Calls:** ▶ **OK**

Calling back a caller from the call list

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ select list ▶ **OK** ▶ select entry ▶ Press the Talk key

Additional options

▶ ▶ ... use to select **Call Lists** ▶ **OK** ▶ select list ▶ **OK** ... possible options:

View an entry: ▶ select entry ▶ **View**



Number into directory:

▶ select entry ▶ **Options** ▶ **Copy to Directory** ▶ **OK**


Number into black list:

▶  select entry ▶ **Options** ▶  **Copy to Blacklist** ▶ **OK**

Request SMS information about a call number (might require payment):

▶  select entry ▶ **Options** ▶  **SMS Enquiry** ▶ **OK**

Delete an entry:


▶  select entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete list:

▶ **Options** ▶  **Delete List** ▶ **OK** ▶ **Yes**

Message lists

Notifications about missed calls, messages on the answering machine/network mailbox, missed SMS messages and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:

 on the answer machine/network mailbox

 in the missed calls list


 in the SMS message list

 in the missed alarms list



The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Example

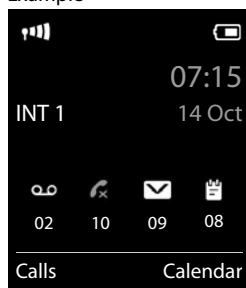


Display messages:

- ▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox:** is always displayed

An entry is marked in **bold**: new messages are available. The number of new messages is shown in brackets.

An entry is **not** marked in bold: no new messages. The number of old messages is shown in brackets.

- ▶  Select a list ▶ **OK** ... the calls or messages are listed

Network mailbox: The network mailbox number is dialed.

Example

Messages & Calls	
Missed Appts:	(2)
Missed Calls:	(5)
Mailbox:	(1)
Answer Mach.:	
Back	OK




 
 





 
The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine on a Gigaset base / CAT-iq router (if available) or for a network mailbox.

Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.


 
In idle status:

 
- ▶  ▶ Press keys      ... the number 9 appears in the display ▶ ... use  to select the message type:

Messages on the network mailbox ▶  

 
missed calls ▶  

new SMS ▶  

Messages on the answer machine (only for a system with a local answer machine) ▶  

... the number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ ... use  to set the action for the arrival of new messages:


The Message key flashes ▶ 

The Message key does not flash ▶ 

- ▶ ... confirm selected setting with **OK**

or

- ▶ return to idle display without making changes: ▶ **Back**

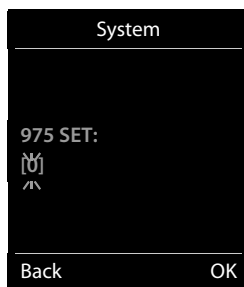

Directories

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.



Information about online directories on IP-capable bases and central directories on CAT-iq bases → user guide of the base.

Opening the directory

▶ Briefly press in idle status

or

▶ ▶ ... use to select **Contacts** ▶ **OK** ▶ **Directory** ▶ **OK**



Changing the assignment of the control key to a directory: → p. 28

Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

▶ ▶ <New Entry> ▶ **OK** ▶ ... use to switch between the entry fields

Name:

▶ ... use to enter the first and/or last name

Numbers:



 
▶ **Tel.1 - Type** ▶ ... use to select a number type (Home, Office or Mobile) ▶ ▶ ... use to enter a number

Enter more numbers: ▶ use to toggle between the entry fields **Tel.1 - Type/Tel.2 - Type/Tel.3 - Type** ▶ ... use to enter a number


Example

New Entry	
First Name:	Robert
Surname:	
Tel.1 - Type:	
	Abc
< C	Save

Anniversary:

- ▶ ... use  to activate/deactivate **Anniversary** ▶ ... use  to enter date and time ▶ ... use  to select type of alert (**Visual only** or a ringtone)

Caller Melody (VIP):



- ▶ ... use  to select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ▶ **Save**






The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry




- ▶  ▶ ... use  to browse searched names

or



- ▶  ▶ ... use  to enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ▶ ... use  to continue browsing to the desired entry, if needed

Scroll through directory: ▶  ▶ Press and **hold** 

Displaying/changing an entry




- ▶  ▶ ... use  to select entry ▶ **View** ▶ ... use  to select the field to be changed ▶ **Edit**

or

- ▶  ▶ ... use  to select an entry ▶ **Options** ▶ **Edit entry** ▶ **OK**

Deleting entries

Delete the **selected** entry:



- ▶  ▶ ... use  to select an entry ▶ **Options** ▶  **Delete entry** ▶ **OK**

Delete **all** entries:

- ▶  ▶ **Options** ▶  **Delete all** ▶ **OK** ▶ **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

- ▶  ▶ **Options** ▶  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

▶  ▶ Options ▶  Available Memory ▶ OK

Copying number to the directory


Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number



The number is displayed or highlighted.

▶ Press the display key  or Options ▶  Copy to Directory ▶ OK ... possible options:

Create a new entry:

▶ <New Entry> ▶ OK ▶ ... use  to select number type ▶ OK ▶ complete entry ▶ Save

Add number to an existing entry:

▶ ... use  to select an entry ▶ OK ▶ ... use  to select number type ▶ OK ... the number is entered or a prompt to overwrite an existing number is displayed ▶ ... if required, answer the prompt with Yes/No ▶ Save

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.
The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Only the date is transferred for an anniversary.

Both handsets support vCards:

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.






The recipient handset does not support vCards:

A separate entry is created and sent for each number.

The sending handset does not support vCards:

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries





- ▶  ▶ ... use  to select the desired entry ▶ **Options** ▶  **Copy entry** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entry is copied

Copy the next entry after successful transfer: ▶ Press **Yes** or **No**




use **vCard via SMS** to send a directory entry in vCard format by SMS.






Copying the entire directory

- ▶  ▶ **Options** ▶  **Copy all** ▶ **OK** ▶  to **Internal** ▶ **OK** ▶ ... use  to select the receiving handset ▶ **OK** ... the entries are copied one after the other

Copying a vCard using Bluetooth


Copy directory entries in vCard format, e.g. to exchange entries with a mobile phone.

 Bluetooth mode is activated
The other handset/mobile phone supports Bluetooth.


- ▶  ▶ ... use  to select an entry if needed ▶ **Options** ▶  **Copy entry / Copy all** ▶  **vCard via Bluetooth** ... the **Known Devices** list is displayed ▶ ... use  to select device ▶ **OK**

Receiving a vCard using Bluetooth

If a device in the **Known Devices** list sends a vCard to your handset, a directory entry is automatically created and a message is shown in the display.

If the sending device is not in the list: ▶ ... use  to enter the PIN of the **sending** Bluetooth device ▶ **OK** ... the copied vCard is available as a directory entry

Synchronising the phonebook with the PC address book (Gigaset QuickSync)





 The Gigaset QuickSync programme has been installed on the computer.
The handset is connected via Bluetooth or via a USB data cable to the computer.

Free download and further information at → gigaset.com/quicksync


Base directory

(depending on the base)

If the DECT base (on a CAT-iq router for example) provides a separate directory, it can also be displayed and edited on the handset.

▶  ▶ ... Use  to select  **Contacts** ▶ OK ▶  **Base Directory** ▶ OK ... The first entry in the phone directory is displayed


or

▶ Press and **hold** the Control button 



For information on the base directory: → Documentation relating to your base/router

Assignment of the control key to a directory

Changing the assignment of the control key to a directory






Briefly press the control key  to open the preferred directory. The default directory is the local one.

The preferred directory is the one

- opened with a **brief** press of the control key 
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

The local directory is the default preferred directory.

Changing the preferred directory:







▶  ▶ ... Use  to select  **Contacts** ▶ OK ▶  **Preferred Directory** ▶ OK ▶ 
Select **Handset Directory** or **Base Directory** ▶ OK

Answer machine



Local answering machine

Some Gigaset bases make available a local answering machine, that you can use from the handset menu. Below is an introduction to the basic functions. For further information → refer to the user guide for the base.







Activate/deactivate the answer machine

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Activation** ▶ OK ▶ ... use  to select **Answer Machine** (if more than one answer machine is available) ▶ **Change** ▶ ... use  to select **On** or **Off** ▶ **Save**

Playing back messages:

- ▶ Press the Message key  ▶ ... use  to select an answer machine (if there are messages for several answer machines) ▶ OK

Recording a personal announcement/advisory message

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Announcements** ▶ OK ▶ ... use  to select **Record Announc.** or **Rec. Advisory Msg.** ▶ OK ▶ ... use  to select **Answer Machine** (if there are several) ▶ OK ▶ OK ▶ record your announcement message (at least 3 seconds) ... possible options:


Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Repeat the recording:

- ▶ **New**

Cancel the recording:

- ▶ Press the End call key  or **Back**

Resume the recording:

- ▶ **OK**

Changing the language for the voice prompt and default announcement (if available)

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select your language ▶ **Select**  = selected)

Network mailbox

Each network mailbox accepts incoming calls made via the corresponding line. To record all calls, a network mailbox must be set up for all handset connections.



The network mailbox has been **requested** from the network provider.

A network mailbox might need to be set up on the phone system or in the base configuration.



The network mailbox is automatically called via the corresponding connection. An automatic area code specific to the phone is **not** prefixed.

The network mailbox messages can be played back using the phone's keypad (digit codes). In the configuration of the phone system / base, conversion of the digit codes to the DTMF signals used by the provider must be set.

Enable network mailbox / Enter number

On the handset, you can manage the network mailboxes that are assigned to one of its receive connections.

- ▶ ▶ ... use to select **Answer Machine** ▶ OK ▶ **Network Mailbox** ▶ OK ▶ ... use to select connection if applicable ▶ OK ... then

For a fixed line network/connection

- ▶ ... use to enter or amend the network mailbox number ▶ **Save**



To activate/deactivate the network mailbox for the fixed line network connection use the phone number and a function code of your network provider. Please contact the network provider if you require any further information.

 
For a VoIP connection

Activate/deactivate network MB:

- ▶ **Status** ... use to select **On** or **Off**
- Enter number: ▶ **Network Mailbox** ▶ ... use to enter or amend the network mailbox number

With some VoIP providers, the phone number has already been downloaded together with the general VoIP provider data and saved to the base station.
- Save settings: ▶ **Save**



Playing back messages

- ▶ Press and hold 








Key 1 has been assigned to the network mailbox.

or


- ▶ Press the Message key  ▶ ... use  to select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ OK

or


- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶ **Play Messages** ▶ OK ▶ ... use  to select network mailbox (**Net AM: Fixed Line / Mailbox: IP1**) ▶ OK

Listen to announcement out loud: ▶ Press the handsfree key 

 
Set fast access for the answer machine







It is possible to call a network mailbox or the telephone's local answer machine directly by pressing key .




For systems without a local answer machine, the network mailbox is automatically connected with key .

Assigning key 1 / Changing assignment




Settings for the fast access are device-specific. A different answer machine can be assigned to key  on each registered handset. The answer machine for the handset's receive connections are offered, e.g. **Net AM: Fixed Line, Mailbox: IP1**.

- ▶  ▶ ... use  to select  **Answer Machine** ▶ OK ▶  **Set Key 1** ▶ OK ▶ ... use  to select answer machine ▶ **Select**  (= selected)

Return to idle status: ▶ Press and **hold** the End call key 

Network mailbox

If no number has yet been saved for the network mailbox:

- ▶ ... use  to make a change in the line **Network Mailbox** ▶ ... use  to enter the number of the network mailbox ▶ **Save** ▶ Press and **hold** the End call key  (idle status)

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The procedure required for your telephone may differ from the procedures described here. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

→ User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

→ Documentation regarding your base/your router

All Gigaset user guides in PDF format:

→ wiki.gigasetpro.com

Sound profiles

The telephone has sound profiles for adapting the handset to the environmental conditions: **Profile Loud**, **Profile Silent**, **Profile Personal**. You can use the **Do not disturb** profile to prevent the handset signalling an incoming call.

▶ Press the Profile key ... The profile currently set is shown

▶ Switch between profiles using key

or

▶ Use to select a profile ▶ OK

Set the microphone sensitivity to loud surroundings:

▶ Press and **hold** the profile key

Profile "Do not disturb"

▶ Set with the profile key

or

▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Do Not Disturb** ▶ **Change** = On)

- The idle display shows "**Do not disturb**" active. The status bar shows
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.




An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

If a call arrives while you are using the telephone, the handset can return to idle status (depends on the base).

Sound profiles

The profiles are set as follows by default:

Default setting		Profile Loud	Profile Silent	Profile Personal
Silent alert		On	Same as Profile Personal	Off
Ringtone		On	Off	On
Ringtone volume	Internal	5	Off	5
	External	5	Off	5
Handset volume	Receiver	5	3	3
	Handsfree	5	3	3
LED light for a call		Yes	No	No
Advisory tones	Key click	Yes	No	Yes
	Battery tone	Yes	Yes	Yes
	Confirmation tone	Yes	No	Yes

Activate alert tone for an incoming call for **Profile Silent**: ► after switching to **Profile Silent** press the display key **Beep** ... the icon  appears in the status bar



The set profile remains set when switching the phone off and back on.

Changes to the settings listed in the table:

- apply in the **Loud** and **Silent** profiles as long as the profile is not changed.
- are permanently saved in **Profile Personal** for this profile.

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2021						
Mo	Tu	We	Th	Fr	Sa	Su
				01	02	03
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	
Back						OK

Saving appointments to the calendar



Date and time have been set.

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Calendar** ▶ **OK** ▶ use to select desired day ▶ **OK** ... then

Switch on/off: ▶ **Activation:** use to select **On** or **Off**

Enter date: ▶ **Date** ... the selected day has been pre-set ▶ use to enter new date

Enter time: ▶ **Time** ▶ use to enter hours and minutes of the appointment

Set name: ▶ **Text** ▶ use to enter a description of the appointment (e.g. evening meal, meeting)

Set alarm tone: ▶ **Signal** ▶ use to select the melody of the reminder alarm or deactivate the acoustic signal

Enter information for the appointment:

- ▶ ... use to successively select **Date**, **Time**, **Text** and **Signal** ▶ use or to set the relevant value ▶ **Save**

Save appointment: ▶ **Save**



If an appointment has already been entered: ▶ **<New Entry>** ▶ **OK** ▶ then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ▶ Press the display key **OFF**

Respond with SMS: ▶ Press the display key **SMS** ... the SMS menu is displayed




During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Appts** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

▶ Press the Message key  ▶  **Missed Appts:** ▶ OK ▶ ... use  to browse through the list of any appointments







or

▶  ▶ ... use  to select  **Organizer** ▶ OK ▶  **Missed Appts** ▶ OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ▶ **Delete**

Displaying/changing/deleting stored appointments

▶  ▶ ... use  to select  **Organizer** ▶ OK ▶  **Calendar** ▶ OK ▶ use  to select day ▶ OK ... the appointment list is displayed ▶ use  to select date ... possible options:

Display appointment details:

▶ **View** ... the appointment settings are displayed

Change appointment:

▶ **View** ▶ **Edit**


or ▶ **Options** ▶  **Edit entry** ▶ OK

Activate/deactivate appointment:

▶ **Options** ▶  **Activate/Deactivate** ▶ OK

Delete appointment: ▶ **Options** ▶  **Delete entry** ▶ OK

Delete all appointments for a day:

▶ **Options** ▶  **Delete all Appts.** ▶ OK ▶ **Yes**

Timer

Setting the timer (countdown)

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Timer** ▶ **OK** ▶ ... then
 - Enable/disable: ▶ **Activation:** ... use to select **On** or **Off**
 - Set the duration: ▶ **Duration** ... use to enter the hours and minutes for the timer
 - Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)
 - Save the timer: ▶ **Save**

The timer starts the countdown. In the idle display, icon and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

- Switch off the alarm: ▶ **OFF**
- Repeat the alarm: ▶ **Restart** ... the timer display is displayed again ▶ set another duration as required ▶ **Save** ... the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

- ▶ ▶ ... use to select **Organizer** ▶ **OK** ▶ **Alarm Clock** ▶ **OK** ... then
 - Switch on/off: ▶ **Activation:** ... use to select **On** or **Off**
 - Setting the wake-up time:
 - ▶ **Time** ▶ ... use to enter hours and minutes
 - Set days: ▶ **Occurrence** ▶ ... use to switch between **Monday-Friday** and **Daily**
 - Set the volume: ▶ **Volume** ▶ ... use to set volume in 5 levels s or select **crescendo** (increasing volume)
 - Set alarm: ▶ **Melody** ▶ ... use to select a ringtone for the alarm
 - Enter alarm data: ▶ ... use to successively select **Time**, **Occurrence**, **Volume** and **Melody** ▶ ... use or to set the relevant value ▶ **Save**
 - Save settings: ▶ **Save**

When the alarm clock is activated, the icon and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ► **OFF**

Repeat the alarm (snooze mode): ► Press **Snooze** or any key ... the alarm is switched off and repeated after 5 minutes.

ECO DECT

(depending on the base)

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

► ► ... use to select **Settings** ► **OK** ► **ECO DECT** ► **OK** ► **Maximum Range** ► **Change** (= deactivated)



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

► ► ... use to select **Settings** ► **OK** ► **ECO DECT** ► **OK** ► **No Radiation** ► **Change** (= activated)



To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and **hold** the Talk key  ... the dialling tone sounds.





Protection against unwanted calls




Time control for external calls




Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶  ▶ ... use  to select  **Audio Settings** ▶ **OK** ▶  **Ringtones (Handset)** ▶ **OK** ▶  **Time Control** ▶ **OK** ▶ ... then

- Switch on/off: ▶ use  to select **On** or **Off**
- Enter time: ▶ use  to switch between **Suspend ring. from** and **Suspend ring. until** ▶ ... use  to enter start and end in 4-digit format
- Save: ▶ **Save**

Example

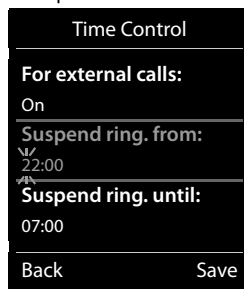







The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers







The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Anon. Calls Silent** ▶ **Edit**  (= activated) ... the call is only signalled on the display






For all handsets

(only on some Gigaset bases)

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Anonymous Calls** ▶ **Edit**  (= activated) ▶ ... use  to select **Protection Mode:**
 - No Protection** Anonymous calls are indicated in the same way as identified numbers.
 - Silent Call** The telephone will not ring and the incoming call will only appear in the display.
 - Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ **Save**

Switch off ringtone when in charging cradle

The handset will not ring when placed in the charging cradle. The call is only indicated on the display.

- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Silent Charging** ▶ **Change**  = ringtone is switched off when in charging cradle)






 

Black list

(only on some Gigaset bases: → wiki.gigasetpro.com)






When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display. These settings apply to all registered handsets.

The black list is enabled when **Silent Call** or **Block Call** is selected as the protection mode.








Displaying/editing the black list

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶ **Blocked Numbers** ▶ OK ... the list of blocked numbers is displayed ... possible options:
 - Create an entry: ▶ **New** ▶ ... use  to enter a number ▶ **Save**
 - Delete an entry: ▶ ... use  to select an entry ▶ **Delete** ... the entry is deleted

Transferring a number from a call list to the black list

- ▶  ▶ ... use  to select  **Call Lists** ▶ OK ▶ ... use  to select **Accepted calls/ Missed calls** ▶ OK ▶ ... use  to select entry ▶ **Options** ▶ **Copy to Blacklist** ▶ OK

Setting the protection mode

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Black List** ▶ **Edit** ▶  **Protection Mode** ▶ OK ▶ ... use  to select desired protection
- No Protection** All calls are indicated, including from callers whose numbers are on the black list.
- Silent Call** The telephone will not ring and the incoming call will only appear in the display.
- Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: ▶ **Save**

Disable the ringtone (do not disturb)

You can use the **Do Not Disturb** function to prevent the handset signalling an incoming call.

- ▶  ▶ ... Use  to select  **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ **Edit**
 = enabled)

- The idle display shows "**Do not disturb**" active.
- Incoming calls are not signalled but show up in the call list as missed calls.
- Most messages are blocked. Exceptions: Appointments, alarm clock and anniversaries.



An incoming call occupies a line even if it is not signalled. If all the lines on the base are occupied, calls cannot be made.

If a call arrives while you are using the phone, the handset can return to idle mode (depends on the base).

Resource Directory













 


Sounds for ringtones and images that can be used as caller pictures (CLIP pictures) or as a screensaver are saved in the handset's resource directory. A range of monophonic and polyphonic sounds and pictures have been pre-set but further images and sounds can be downloaded using a PC (→ Gigaset QuickSync).

Media types:

Type	Format
Sound Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Picture CLIP-picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

If insufficient memory is available, you must delete one or more pictures or sounds before others can be saved.

Managing images (for screensaver and CLIP) and sounds






- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK**
... possible options:
- View image: ▶  **Select Screensavers / Caller Pictures** ▶ **OK** ▶ use  to select picture ▶ **View** ... the selected picture is displayed
- Play sound: ▶  **Select Sounds** ▶ **OK** ▶ use  to select sound ... the selected sound is played
Set volume: ▶ **Options** ▶ **Volume** ▶ **OK** ▶ use  to select volume ▶ **Save**
- Rename picture/sound:
▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ ... use  to select sound/image ▶ **Options** ▶ **Rename** ▶ use  to delete name, use  to enter new name ▶ **Save** ... the entry is saved with the new name
- Delete picture/sound:
▶  **Select Screensavers / Caller Pictures / Sounds** ▶ **OK** ▶ use  to select sound/picture ▶ **Options** ▶ **Delete entry** ... the selected entry is deleted



The relevant options are not available if a picture/sound cannot be deleted.

Check memory

Display the available memory for screensavers and CLIP-pictures.

- ▶  ▶ ... use  to select  **Additional Features** ▶ **OK** ▶  **Resource Directory** ▶ **OK** ▶  **Capacity** ▶ **OK** ... the percentage of available memory is displayed

Bluetooth

The handset is able to use Bluetooth™ to communicate wirelessly with other devices that also use this technology, e.g. to connect a Bluetooth headset or hearing aid.



Bluetooth is activated and the devices have been registered to the handset.

The following devices can be connected:

- A Bluetooth headset or hearing aid



The headset / hearing aid has the **Headset** or **Handsfree profile**. If both profiles are available, the handsfree profile is used to communicate.

It may take 5 seconds to establish a connection to the headset, whether a call is accepted using the headset or transferred to the headset, or a call is made from the headset.

- Up to 5 data devices (PCs, tablets or mobile phones) for the transmission of address book entries as a vCard or for the exchange of data with the computer.

In order for telephone numbers to be used further, the area code (international and local area code) must be saved to the telephone.

Operating Bluetooth devices → device user guides

Activating/deactivating Bluetooth mode

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Activation** ▶ **Change** = activated)

If the local area code is still not saved: ▶ ... use  to enter local area code ▶ **OK**

When in idle status, the activated Bluetooth mode is indicated on the handset by the  icon.

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the active Bluetooth device (headset or data device) should not exceed 10 m.



The registration of a headset overwrites a previously registered headset.

If a headset is to be registered that is already registered with a different device, this connection must be deactivated before registering.

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Search for Headset / Search Devices** ▶ **OK** ... the search starts (may take up to 30 seconds) ... the names of found devices are displayed ... possible options:

Register device: ▶ **Options** ▶ **Trust Device** ▶ **OK** ▶ ... use to enter the PIN of the Bluetooth device to be registered ▶ **OK** ... the device is added to the list of known devices

Showing information:

- ▶ ... use to select a device, if applicable ▶ **View** ... the device name and device address are displayed

Repeat search: ▶ **Options** ▶ **Repeat Search** ▶ **OK**

Cancel search: ▶ **Cancel**

Editing the list of known (trusted) devices

Open the list

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ... the known devices are listed, an icon indicates the type of device

Bluetooth headset

Bluetooth data device

If a device is connected, the relevant icon is shown in the display header instead of .

Edit an entry

- ▶ ▶ ... use to select **Bluetooth** ▶ **OK** ▶ **Known Devices** ▶ **OK** ▶ ... use to select entry ... possible options:

View an entry: ▶ **View** ... the device name and device address are displayed ▶ Press **OK** to go back

De-registering a device:

- ▶ **Options** ▶ **Delete entry** ▶ **OK**



Edit name: ▶ **Options** ▶ **Edit Name** ▶ **OK** ▶ ... use to edit name ▶ **Save**



If an active Bluetooth device is de-registered, it may try to re-connect as a "non-registered device".

Rejecting/accepting a non-registered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect to the handset, a prompt will appear asking you to enter the PIN of the Bluetooth device (Bonding).






- Reject: ▶ **Briefly** press the End call key 
- Accept: ▶ ... use  to enter the PIN of the Bluetooth device to be accepted ▶ **OK** ▶ ... Wait for PIN confirmation ... then

Add the device to the list of known devices: ▶ **Yes**

use the device temporarily: ▶ **No** ... the Bluetooth connection can be used, as long as the device is located within transmission range or until it is switched off

Changing the Bluetooth name of the handset

The handset is shown by this name on another Bluetooth device.

- ▶  ▶ ... use  to select  **Bluetooth** ▶ **OK** ▶  **Own Device** ▶ **OK** ... the name and the device address are shown ▶ **Change** ▶ ... use  to change the name ▶ **Save**

Additional functions using the PC interface



The **Gigaset QuickSync** program has been installed on the computer.

Free to download at → www.gigaset.com/quicksync

QuickSync functions:

- Sync the handset's directory with Microsoft® Outlook®
 - Upload CLIP-pictures (.bmp) from the computer to the handset
 - Upload pictures (.bmp) as screensavers from the computer to the handset
 - Upload sounds (ringtone melodies) from the computer to the handset
 - Update firmware
 - Cloud synchronisation with Google™
- ▶ Connecting the handset to the computer via Bluetooth or via a USB data cable.



Connect the handset **directly** to the PC and **not** via a USB hub.

Transferring data



Data transfer using Bluetooth:

- The computer has Bluetooth capability.
- A USB data cable is not plugged in. If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is interrupted.

- ▶ Launch the **Gigaset QuickSync** program on the computer.


 
The message **Data transfer in progress** is shown on the display during data transfer between the handset and PC. During this time, it is not possible to enter any data using the keypad and incoming calls are ignored.


Carrying out a firmware update

- ▶ Connect the telephone and the PC using a **USB data cable** ▶ Launch **Gigaset QuickSync** ▶ Establish connection to the handset
- ▶ Start firmware update in **Gigaset QuickSync** . . . Information about this can be found in **Gigaset QuickSync** help feature

The update process may take up to 10 minutes (not including download time).

The data are first downloaded from the online update server. The time required for this depends on Internet connection speed.

The display on your telephone is switched off, the Message key  and the Talk key  flash. Once the update is complete, your telephone will automatically restart.

 
 
 


 
 The firmware can also be updated directly via the DECT radio link if the base/router supports this (→ **Handset Update**).

Procedure in the event of an error


If the update procedure fails or the telephone no longer functions properly after the update, repeat the update procedure:

- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery ▶ Re-insert the battery
- ▶ Carry out the firmware update again as described above

If the update procedure fails more than once or it is no longer possible to connect to the PC, carry out the **Emergency Update**:







- ▶ End the **Gigaset QuickSync** program on the PC ▶ Remove the USB data cable from the telephone ▶ Remove the battery
- ▶ Press and hold keys  and  at the same time with the forefinger and middle finger ▶ Replace the battery
- ▶ Release keys  and  . . . the Message key  and the Talk key  will flash alternately
- ▶ Carry out the firmware update as described above





 Always save pictures and sounds uploaded onto the handset on the PC, as they are deleted during an **Emergency Update**.

Setting the handset

Changing the language

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Language** ▶ OK ▶ ... use  to select language ▶ **Select** ( = selected)









If the handset has been set to an incomprehensible language:

- ▶  ▶ Press the keys **9** **5** **slowly** one after the other ▶ ... use  to select the correct language ▶ press the right display key


Display and keypad

Screensaver


A digital or analogue clock, Info Services and a range of pictures can be selected to be displayed as a screensaver when in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Screensaver** ▶ **Edit** (= on) ... then
 - Switch on/off: ▶ **Activation:** ... use  to select **On** or **Off**
 - Select screensaver: ▶  **Selection** ▶ ... use  to select a screensaver (**Digital Clock / Analog Clock / Info Services / <Pictures> / Slideshow**)
 - View screensaver: ▶ **View**
 - Save selection: ▶ **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.


-  All pictures from the **Screensaver** folder of the **Resource Directory** are available for selection.


End screensaver

- ▶ Press the End call key  **briefly** ... the display changes to idle status

Notes on displaying Info Services

(only on an IP-capable Gigaset base)







-  **Info Services** are activated via the web configurator.
The telephone is connected to the Internet.

-  If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on an IP-capable Gigaset base)







The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Info Ticker** ▶ Edit  = on)

The text appears as soon as the telephone changes to idle status. If a message is shown in the display, the info text is not displayed.








Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Large Font** ▶ Change  = on)

Colour scheme








You can choose from a range of colour combinations for the display.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Colour Schemes** ▶ OK ▶ ... use  to select the desired colour scheme ▶  = selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Display Backlight** ▶ OK ▶ Use  to select when the setting is applied (**In Charger / Out of Charger / In Talk State**) ▶ Select in each case with  **On** or **Off** ▶ **Save**



The handset's standby time may be significantly reduced if the display backlight is switched on.

Keypad illumination

The keypad has 5 levels of brightness to choose from.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Display & Keypad** ▶ OK ▶  **Key Illumination** ▶ OK ▶ ... use  to select **Brightness (1 - 5)** ▶ **Save**

Activating/deactivating automatic keypad lock

Automatically lock the keypad when the handset has been in idle status for around 15 seconds.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Auto Keypadlock** ▶ Change = on

Assigning the Functions key

Assign one of the following functions to the Functions key in the top left of the handset.



QuickDial The phone number assigned to the key is dialled.

Send Key A phone number previously entered from the keypad (or selected in a call list or the directory) is dialled.

- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Display & Keypad** ▶ OK ▶ **Feature Key** ▶ OK ... then

Enable/disable: ▶ **Activation:** Use to select **On** or **Off**

Specify whether the Functions key is also locked when the keypad lock is enabled, or it stays enabled:

- ▶ **Keypad locked** ▶ Use to select **Key active** or **Key inactive**

To select a function: ▶ **Function** ▶ ... Use to select a function

Save the selection: ▶ **Save**

Using the Functions key → p. 14

Tones and signals

Call volume

You can set the volume of the earpiece, handsfree function and headset on 5 levels independently of each other.



Changes are only saved permanently in **Profile Personal**.

During a conversation

- ▶ **Handset Volume** ▶ ... use to select volume ▶ **Save** ... the setting is saved

In idle status

- ▶ **Handset Volume** ▶ Use to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use to select the volume ▶ **Save** ... The setting is saved

or

- ▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Handset Volume** ▶ OK ▶ Use to select what the setting is to apply for (**Earpiece / Speaker / Corded headset**) ▶ Use to set the volume ▶ **Save**

Automatic volume control

(depending on the base)



Crescendo is **not** set for the ringtone volume (→ p. 50).

The phone is able to automatically adjust the volume of the receiver and ringtone to the ambient volume. Here you can set the sensitivity with which the phone reacts to changes in noise level (**Very High, High, Medium, Low, Very Low**).

- ▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Smart Volume** ▶ OK ▶ **Earpiece Volume / Ringtone Volume** ▶ Edit
- Enable/disable: ▶ **Activation:** Use to select **On** or **Off**
- Adjust the sensor: ▶ **Sensitivity** ▶ Use to adjust the sensor sensitivity
- Save: ▶ **Save**

Headset – volume correction

Change the call volume for the wired headset. In addition to the standard settings for the call volumes, here you can compensate the audio setting characteristics of your headset.

- ▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Corded Hdset Boost** ▶ Use to set the volume ▶ **Save**

Microphone sensitivity

Adjust the sensitivity of the microphone for the receiver or wired headset. This gives you improved acoustics in loud environments and when there are echoes.

- ▶ ▶ ... Use to select **Audio Settings** ▶ OK ▶ **Mic Sensitivity** ▶ OK ▶ Use to select what the setting applies for (**Earpiece / Corded headset**) ▶ Use to adjust the sensitivity ▶ **Save**

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.







- ▶ ▶ ... use to select **Audio Settings** ▶ OK ▶ **Acoustic Profiles** ▶ **Earpiece Profiles / Handsfree Profiles** ▶ OK ▶ use to select profile ▶ Select = selected)

Earpiece Profiles: **High frequency** or **Low frequency** (default setting)


Handsfree Profiles: **Standard** (default setting) or **Reduced Echo**

Ringtones

Ringtone volume

- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶ **Volume** ▶ OK ▶ use  to select **For internal calls and alarms** or **External Calls** ▶ use  to set volume in 5 levels or in crescendo mode (increasing volume) ▶ **Save**



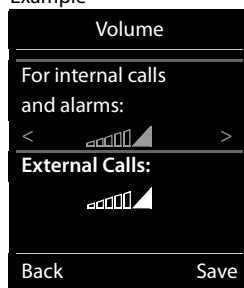



 
Example



Changes are only saved permanently in **Profile Personal**.



Ringtone melody



Set a variety of ringtones for internal and external calls for every available send/receive connection of the telephone (**Landline, IP1**) or set the same ringtone for **All calls**.

- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Ringtones (Handset)** ▶ OK ▶  **Melodies** ▶ OK ▶ use  to select the connection ▶ use  to select the ringtone/melody in each case ▶ **Save**

Switching the ringtone on/off

Switching the ringtone off permanently


- ▶ Use the  key to set the **Profile Silent** ... The following icon appears in the status bar: 
- or: Enable "Do not disturb"

- ▶  ▶ ... Use  to select  **Audio Settings** ▶ OK ▶  **Do Not Disturb** ▶ **Change**  = enabled)

Switching the ringtone on permanently

Use the  key to set **Profile Loud** or **Profile Personal**


Switching the ringtone off for the current call

- ▶ **Silence** or press the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Use the Profile key to select  **Profile Silent** ▶ **Press Beep** within 3 seconds ... The following is shown in the status bar: 

Switching off the alert tone: ▶ Use the Profile  key to change profile






Switching the silent alert on/off

Incoming calls and other messages are indicated by a silent alert.



- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Silent Alert** ▶ **Change** ( = on)

Switching advisory tones on/off


 
The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶ ... use  to select  **Audio Settings** ▶ OK ▶  **Advisory Tones** ▶ OK ... then Tone when keys are pressed:
 - ▶ **Key Tones:** ... use  to select **On** or **Off**



Confirmation/error tone after making entries, advisory tone when a new message has been received:

 - ▶  **Confirmation** ▶ ... use  to select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

 - ▶  **Battery** ▶ ... use  to select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:






 - ▶  **Out of Range:** ... use  to select **On** or **Off**

 
Save settings:

 - ▶ **Save**

Auto answer







When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶ **Auto Answer** ▶ **Change** ( = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle. Exception: Press and hold the handsfree key  for a further 2 seconds while placing the handset in the charging cradle.

Activating/deactivating visual call signal

Visual indication of incoming calls via the spot LED (e.g. in noisy environments).

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **LED Call Signal** ▶ **Change** ( = on)



Changes are only saved permanently in **Profile Personal**.

Emergency numbers

You can enter up to three phone numbers as emergency numbers - that you can also dial when the keypad lock is PIN-protected.

- ▶ ▶ ... Use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Emergency Numbers** ▶ OK ▶ Use to select an entry (--- = empty entry) ▶ **Change** ▶ Use to enter the name for the emergency number ▶ Use to enter the emergency number ▶ **Save**

Delete entry: ▶ Use to delete the name and phone number ▶ **Save**

Changing the name of a connection (line)

(only on a CAT-iq router)

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Connections** ▶ OK ... all available connections (lines) are displayed ▶ ... use to select connection ▶ OK ▶ **Connection Name** ▶ OK ▶ ... use to change the name of the connection ▶ **Save**

Assigning handsets to a connection (line)

(only on a CAT-iq router)

Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Connections** ▶ OK ▶ ... use to select connection ▶ OK ▶ **Assigned Handsets** ... all registered handsets are displayed ▶ ... use to select handset ▶ **Change** = handset is assigned)

Permit/prevent multiple calls

(only on a CAT-iq router)








If the function is activated, multiple calls can be made in parallel.

- ▶ ▶ ... use to select **Settings** ▶ OK ▶ **Telephony** ▶ OK ▶ **Connections** ▶ OK ▶ ... use to select connection ▶ ▶ OK ▶ **Multiple Calls** ▶ **Change** = activated)

Permit/prevent internal listening in

 
 
 
(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **Telephony** ▶ OK ▶  **Connections** ▶ OK ▶ ... use  to select connection ▶ OK ▶  **Listening In** ▶ OK ▶ **Change** = activated)

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys  and  to .





A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ ... use  to select an entry ▶ OK ▶ ... use  to select a number if necessary ▶ OK ... the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.


Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or


- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ ... press the display key ... the number is dialled

Changing the digit key assignment


- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:
Change the assignment:
 - ▶ ... use  to select an entry ▶ OK ▶ ... select a number if required ▶ OK
- Delete the assignment:
 - ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ ... Use  to select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**

 The availability of functions depends on the base.








Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the handset PIN


The handset is protected against unauthorised use by a PIN. The handset PIN must be entered e. g. when switching off the keypad lock.

Change the handset's 4-digit PIN (default setting: **0000**):

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset PIN** ▶ **OK** ▶ ... use  to enter the current PIN ▶ **OK** ▶ ... use  to enter the new handset PIN ▶ **OK**

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).






 The base/router to which the handset is registered must also support this function ([→ wiki.gigasetpro.com](http://wiki.gigasetpro.com))

If your base/router does not support this function, you can also update the firmware via a USB cable and **Gigaset Quick Sync**.







The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶  ▶ ... use  to select  **Settings** ▶ **OK** ▶  **System** ▶ **OK** ▶  **Handset Update** ▶ **OK** ▶  **Automatic Check** ▶ **OK** ▶ **Change** ( = enabled)







Start the firmware update manually

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Update** ▶ OK ▶ OK ... if there is new firmware, the update will start








The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Update** ▶ OK ▶  **Current Version** ▶ OK ... the firmware version of the handset is displayed

Resetting a handset

Reset any individual settings and changes that you have made.

- ▶  ▶ ... use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Handset Reset** ▶ OK ▶ Yes ... the handset's settings are reset









The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists
- SMS lists

Resetting the handset to the default settings

Reset all settings and personal information.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Erase Handset** ▶ OK ▶ Use  to enter the current PIN ▶ OK

All user information, lists, the directory and the handset registration with the base are erased. The Registration wizard is started.

Settings for the base

(only on a CAT-iq router)






Changing the base PIN

You need to enter the base PIN when, for example, (de)registering a handset or resetting the base to its default settings.






- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base PIN** ▶ OK ▶ Use  to enter the current base PIN ▶ OK ▶ Use  to enter the new PIN ▶ OK

Displaying base version

The function shows information on the base, such as firmware version, DECT version and name.

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base Version** ▶ OK

Resetting the base

- ▶  ▶ ... Use  to select  **Settings** ▶ OK ▶  **System** ▶ OK ▶  **Base Reset** ▶ OK ▶ Yes

Appendix

Customer Service & Help

Do you have any questions?

For quick help and information, please refer to this user guide or visit gigasetpro.com.

For online information and services concerning

- Products
- Documents
- Interop
- Firmware
- FAQ
- Support

please refer to wiki.gigasetpro.com.

For further information our Gigaset specialised reseller will be happy to help you related to your Gigaset product.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Hereby, Gigaset Communications GmbH declares that the radio equipment type Gigaset R700H PRO is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

gigasetpro.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2012/19/EU.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid

If the device comes into contact with liquid:

- 1 **Disconnect the power supply.**
- 2 **Remove the batteries and leave the battery compartment open.**
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 **Do not switch on the device again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

Technical data

Battery

Technology:	2 x AAA NiMH
Voltage:	1.2 V
Capacity:	750 mAh

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way they are used. (All times are maximum possible times.)

Standby time (hours)	320/180 *
Talktime (hours)	13
Operating time with 1.5 hours of calls per day (hours)	100/85 *
Charging time in charging cradle (hours)	8.5

* With the **No Radiation** function disabled / with the **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging:	approx. 1.50 W
To maintain the charge status:	approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 μ s
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/PD (pulse dialling)

Bluetooth

Radio frequency range	2402-2480 MHz
Transmission power	4 mW pulse power

Power adapter

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 / C710
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

Standard characters

Press the relevant key the number of times indicated.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	← ¹⁾	.	,	?	!	← ²⁾	0			

- 1) Space
- 2) Line break









Accessories











Name	Item number
Professional belt clip S:	S30852-Z2974-R142

Display icons

 

The following icons are displayed depending on the settings and the operating status of your telephone.




Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off)
	1% -100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator flashes : Answer machine is recording a message or is being operated by another internal participant (only for a system with a local answer machine)
	Profile Silent activated (Ringtone switched off)
	"Beep" ringtone activated
	Keypad lock activated



 
 
 
Icon	Meaning
	Bluetooth enabled
	Headset / hearing aid connected via Bluetooth
	Data device connected via Bluetooth
	"Do not disturb" enabled
	Battery charge status:
	White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status):
	0% - 100%






Display key icons

Icon	Meaning
	Last number redial
	Delete text








Icon	Meaning
	Open the directory
	Copy number to the directory
	Divert a call to answer machine (only for a system with a local answer machine)

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording (only for a system with a local answer machine)

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)
	Information
	(Security) prompt
	Please wait ...

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Index

-
- A**
- Activating/deactivating message LED 23
 - Advisory tones 51
 - Alarm 37
 - Alarm clock 36
 - switch on/off 36
 - Alert tone (beep) 33, 50
 - Anniversary, see Appointment
 - Answer machine
 - calling back a caller 21
 - playing back messages 31
 - set fast access 31
 - voice prompt language 29
 - Answer, auto 51
 - Appointment
 - display missed 35
 - missed 35
 - notification 34
 - setting 34
 - Assigning key 1 31
 - Assigning number key 53
 - Auto answer 51
-
- B**
- Base directory 28
 - Battery
 - charging status 62
 - inserting 8
 - Beep (alert tone) 33, 50
 - Belt clip 11
 - Best base station 10
 - Black list 39
 - copying a number from a call list 39
 - Bluetooth 42
 - activate 42
 - changing the device name 44
 - copy directory (vCard) 27
 - de-register devices 43
 - list of known devices 43
 - registering devices 43
 - Broken display 5
-
- C**
- Calendar 34
 - Call
 - external 17
 - Call block 40
 - Call divert 19
 - Call list
 - copying a number to the directory 21, 22
 - delete 22
 - delete an entry 22
 - dialling 18
 - entry 21
 - opening 21
 - Call lists 21
 - Call protection 38
 - Call, anonymous 18
 - protection from 39
 - Calling
 - external 17
 - Care 58
 - Care of the device 58
 - Changing
 - display language 46
 - Changing the device name (Bluetooth) 44
 - Changing the handset PIN 54, 55
 - Character charts 60
 - Charge status of the batteries 62
 - Charging the batteries 8
 - Charging time of handset 59
 - CLIP image
 - view in resource directory 41
 - Colour scheme 47
 - Connecting the charging cradle (handset) 7
 - Connecting the USB data cable 12
 - Connection
 - assigning handset 52
 - changing name 52
 - Contact with liquid 58
 - Contents of the package 7
 - Control key 3, 13
 - Correcting incorrect entries 16
 - Countdown (timer) 36
 - Country
 - set 9
 - Customer Care 57
 - Customer Service 57
-
- D**
- Data protection 57
 - Deactivating wireless module 37
 - De-registering devices (Bluetooth) 43
 - Dialling
 - from the call list 18
 - from the directory 17
 - from the redial list 17
 - using quick dial 53
 - Directory 24
 - copy vCard (Bluetooth) 27
 - copying numbers 26
 - dialling numbers 17
 - entry 24
 - memory 26
 - opening 24
 - order of entries 25
 - preferred 28
 - saving an entry 24

- searching 25
 - selecting an entry 25
 - sending entry/list to handset 27
 - sending to handset 27
 - Directory key
 - change assignment 28
 - Display
 - activating/deactivating new message 23
 - backlight 47
 - broken 5
 - changing display language 46
 - colour scheme 47
 - directory memory 26
 - large font 47
 - missed appointment/anniversary 35
 - network mailbox message 22
 - screensaver 46
 - setting 46
 - Display icons 62
 - Display keys 3, 14
 - assigning 53
 - icons 62
 - Display language
 - setting 9
 - Disposal 58
 - "Do not disturb" profile 32
-
- E**
- Earpiece profile 49
 - Earpiece volume 19
 - automatic 49
 - ECO DECT 37
 - Emergency numbers 52
 - not possible 5
 - End call key 3, 17
 - Entering special characters 16
 - Entering text 16
 - Entering the number
 - of the network mailbox 30
 - Entering umlauts 16
 - Environment 58
-
- F**
- Fast access 31
 - Firmware update 54
 - Firmware updates 45
 - Functions key 3
-
- G**
- Getting started 7
 - Gigaset QuickSync 27, 44
-
- H**
- Handset
- assigning connection 52
 - automatic keypad lock 48
 - changing the settings 46
 - colour scheme 47
 - connecting the charging cradle 7
 - display backlight 47
 - display language 46
 - handset volume 19
 - handsfree volume 19
 - idle status 16
 - keypad illumination 47
 - muting 19
 - overview 3
 - registering 9
 - resetting 55
 - restoring to default setting 55
 - setting up 8
 - switch on/off 13
 - update 54
- Handsfree key 19
 - Handsfree mode 19
 - Handsfree profile 49
 - Handsfree volume 19
 - Hash key 3
 - Headset (Bluetooth) 42
 - Headset connection 3
 - Headset socket 12
 - Headset volume 49
 - Help 57
-
- I**
- Icons
- alarm clock 36
 - displaying new messages 22
 - indications 63
 - on display keys 62
 - status bar 62
 - timer 36
- Idle status
 - returning to 16
- Illumination, keypad 47
- Indications, icons 63
- Internal listening in 53
-
- K**
- Key 1 (fast access) 3
 - Key, assigning 53
 - Keypad illumination 47
 - Keypad lock, automatic 48

- Keys**
- control key 3, 13
 - display keys 3, 14
 - end call key 3, 17
 - fast access 3
 - functions key 3
 - handsfree 19
 - hash key 3
 - menu 13
 - message key 3
 - on/off key 3
 - profile key 3, 32
 - recall key 3
 - star key 3
 - talk key 3
 - volume 14
 - volume keys 3
-
- L**
- Language
 - display 46
 - Large font 47
 - LED 3
 - Line 52
 - Liquid 58
 - List
 - known devices (Bluetooth) 43
 - Locking/unlocking the keypad 13
 - Loud surroundings 20
 - Lower/upper case 16
-
- M**
- Making calls
 - external 17
 - Manufacturer's advice 57
 - Maximum Range 37
 - Medical equipment 6
 - Melody
 - ringtone for internal/external calls 50
 - Memory in the directory 26
 - Memory, resource directory 42
 - Menu key 13
 - Message key 3
 - Message lists 22
 - Microphone
 - adjust sensitivity 20, 49
 - switch on/off 19
 - volume 49
 - Missed anniversaries/appointments 35
 - Multiple calls 52
 - Muting the handset 19
-
- N**
- Network mailbox 30
 - activate/deactivate 30
 - defining for fast access 31
 - entering number 30
 - Network MB, see Network mailbox
 - Number
 - copying to the directory 26
 - saving in the directory 24
 - Numbers
 - entering 16
-
- O**
- On/off key 3
 - Open Source Software 64
 - Operating time of handset 59
 - Overview
 - handset 3
-
- P**
- PC Interface 44
 - Picture
 - as CLIP image 41
 - as screensaver 41
 - delete 41
 - formats 41
 - rename 41
 - Play sound 41
 - Power adapter 5, 60
 - Preferred directory 28
 - Profile key 3, 32
 - Profiles 32
 - Protection from calls
 - "Do not disturb" profile 32
 - anonymous 39
 - black list 39
 - switch off ringtone when in charging
 - cradle 39
 - time control 38
-
- Q**
- Quick dial 17, 31
 - QuickSync 27, 44
-
- R**
- Radiation
 - reducing 37
 - Radiation-free 37
 - Recall key 3
 - Redial list 17, 21
 - Registering (handset) 9
 - Registering device (Bluetooth) 43
 - Resource Directory
 - memory 42
 - Resource directory
 - view CLIP image 41
 - Ringtone
 - automatic volume 49
 - changing 50
 - melody for internal/external calls 50
 - switch off when in charging cradle 39
 - time control 38

volume	50	Switch on/off alarm (timer)	36
<hr/>		<hr/>	
S		T	
Screensaver	46	Talk key	3
Searching in directory	25	Technical data	59
Sending		Telephone	
entire directory to handset	27	operating	13
Sensitivity		Time control for external calls	38
volume	49	Timer	36
Setting the date	10	Torch	3
Setting the time	10	switching on and off	15
Setting up the handset	8	<hr/>	
Show new messages	22	U	
Sicherheitshinweise	5	Update	45
Signal strength	62	Upper/lower case	16
Silent alert	51	<hr/>	
Snooze mode (alarm)	37	V	
Sound		Viewing network mailbox message	22
delete	41	VIP group, classify directory entry	25
formats	41	VIP ringtone	25
playback	41	Visual call signal	51
rename	41	Volume	
Sound profiles	32	earpiece	48
Sounds for ringtones	41	handset speaker/earpiece volume	19
Speaker	19	headset	48, 49
Spot LED	3	speaker	48
turn on/off	15	Volume keys	3, 14
Star key	3		
Status bar	3		
icons	62		
SUOTA	54		

All rights reserved. Rights of modification reserved.

Issued by

Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2021

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigasetpro.com

Other ManualsLib Projects



www.manualslib.com



www.manualslib.de



www.manualslib.es



www.manualslib.fr



www.manualslib.nl



www.manualslib.mx



www.manualslib.tech 30+ Languages